

NIGHT DEPOSITORY REPLACEMENT GUIDE

**BEST
– IN –
CLASS**

With Hamilton's 98RH and 80UC, you can replace virtually any night head without having to replace the safe.

Hamilton's 98RH depository head is UL Listed

- Stainless steel all weather construction
- Does not require structural changes to the building or masonry
- Replaces Mosler, LeFebure, Diebold and other brands
- Ideal upgrade where UL specifications must be met
- Provides substantial cost savings as you don't have to replace the chute and safe

Hamilton's 80UC Depository Head

- Industry standard for 35 years
- Maintenance free stainless-steel exterior
- Designed for both Drive-up and Walk-up applications
- Contains Anti-fish, embedded alarm system and physical security shield protection features
- Weather-seal kit included
- 80UC night head can be combined with a safe and chute to form a complete integrated depository system



**"Best in Class"
for Replacement
Night Head Solution**

est. 1967

HAMILTON

CUSTOM MADE SECURITY

Night Depository Replacement Guide



Lefebure – 101
 Replace With: 98RH
 Kit: N/A
 Instructions: N/A



Lefebure – 201
 Replace With: 98RH
 Kit: N/A
 Instructions: N/A



Lefebure – 312
 Replace N/A
 Kit: N/A
 Instructions: N/A



Lefebure – 412
 Replace 80UC
 Kit: B6883
 Instructions: N/A



Lefebure – 577
 Replace N/A
 Kit: N/A
 Instructions: N/A



Lefebure – 612
 Replace With: 98RH
 Kit: B6357
 Instructions: Doc #08-327



**Mosler Magna
 Bag Only**
 Replace: With 98RH
 Kit: B6379
 Instructions: 08-328



**Allied – Nightwatch
 Dual**
 Replace With: 98RH
 Kit: 96-440
 Instructions: N/A



American Vault – 85
 Replace With: 80UC
 Kit: B6883
 Instructions: N/A



**Chubb/Diebold–
 Citadel**
 Replace With: 80UC
 Kit: N/A
 Instructions: N/A

Collier – ND1000
 Replace With: 98RH
 Kit: 96-449
 Instructions: N/A

**Collier – ND2000/
 ND2010**
 Replace With: 80UC
 Kit: 96-475
 Instructions: N/A

**Diebold Eagle
 Bag Only**
 Replace With: 98RH
 Kit: Not Needed
 Instructions: N/A

**Diebold– Eagle 103
 Dual Flush**
 Replace With: 98RH
 Kit: None Needed
 Instructions: Doc
 #08-326



**Diebold – Eagle 103
 Dual Recessed**
 Replace With: 98RH
 Kit: N/A
 Instructions: N/A

**Diebold – Polaris
 Flush**
 Replace With: 98RH
 Kit: B6358
 Instructions: Doc
 #08-325

**Diebold – Polaris
 Flush Bag Only**
 Replace With: 98RH
 Kit: None Needed
 Instructions: N/A

**Diebold – Polaris
 Recessed**
 Replace With: 98RH
 Kit: B6406
 Instructions: N/A

Diebold – Securomatic
 Replace With: 80UC (98RH)
 Kit: 96-451 (B10374)
 Instructions: Doc
 #08-323

Night Depository Replacement Guide



Diebold – Cashgard
 Replace With: 80UC
 Kit: B6883
 Instructions: N/A



Fortis – AHD106
 Replace With: 80UC
 Kit: N/A
 Instructions: N/A



Fortis – AHDR 509
 Replace With: 98RH
 Kit: N/A
 Instructions: N/A



Hamilton – 68F
 Replace With: 98RH
 Kit: N/A
 Instructions: N/A



Hamilton – 67R
 Replace With: 98RH
 Kit: N/A
 Instructions: N/A



Hamilton – 68B
 Replace With: 98RH
 Kit: N/A
 Instructions: N/A



Mosler - American
 Replace: 98RH
 Kit: B6379
 Instructions: 08-328



Mosler – C77-DF
 Replace With: 98RH
 Kit: B6387
 Instructions: Doc
 #08-329



Mosler – C77-DR
 Replace With: 98RH
 Kit: B6394
 Instructions: Doc
 #08-330




Mosler – C77- ER
 Replace With: N/A
 Kit: N/A
 Instructions: N/A



Mosler – Century
 Replace With: 98RH
 Kit: 96-470
 Instructions: Doc
 #08-331



**Mosler Magna
 Dual Recessed**
 Replace: 80UC
 Kit: 96-450
 Instructions: N/A

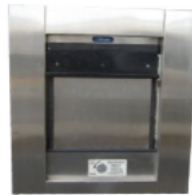

Mosler – Universal
 Replace With: N/A
 Kit: N/A
 Instructions: N/A



National – Flush
 Replace With: 98RH
 Kit: N/A
 Instructions: N/A



National-Recessed
 Replace With: 98RH
 Kit: N/A
 Instructions: N/A



**Security
 Corporation – ND-11**
 Replace With: 98RH
 Kit: 96-448
 Instructions: N/A



SSE
 Replace With: 98RH
 Kit: N/A
 Instructions: N/A



**SSE – Replacement
 Head**
 Replace With: N/A
 Kit: N/A
 Instructions: N/A



Kumahira – ND-61
 Replace With: N/A
 Kit: N/A
 Instructions: N/A



Securifort
 Replace With: 98RH-20
 Kit: 14-012-CANADA
 Instructions: 14-012 USA

Night Depository Replacement Guide



National – Flush
 Replace with: 98RH
 Kit: N/A
 Instructions: N/A



National – Recessed
 Replace with: 98RH
 Kit: N/A
 Instructions: N/A



Chubb “T” Trap
 Replace with: 98RH-20
 Kit: 96-798 CANADA
 Kit: 96-959 USA



TANN-NDH-100
 Replace with: 98RH-20
 Kit: 96-919 CANADA
 Instructions: N/A



Chubb – Citadel c6
 Replace with: 98RH-20
 Kit: 96-813 USA
 Kit: 96-794 CANADA



MGM
 Replace with: 98RH-20
 Kit: 96-705
 Instructions: N/A



**American 85–
 Short (Waco)**
 Replace with: N/A
 Kit: 14-005 CANADA
 Kit: 14-006 USA



**American 85–
 ADANAC**
 Replace with: 98RH-20
 Kit: 96-963 ADANAC USA
 Kit: 96-922 CANADA



**Diebold Polaris
 Over and Under**
 Replace with: 98RH-20
 Kit: 96-824 CANADA
 Instructions: USA N/A



**Diebold Polaris
 Side by Side**
 Replace with: 98RH-20
 Kit: 96-802 CANADA
 Instructions: USA N/A



Chubb “Q”
 Replace with:
 98RH-20
 Kit: 96-830 USA
 Kit: 96-758
 CANADA



**Diebold Securomatic
 Trap**
 Replace with: 98RH-20
 Kit: 96-757 CANADA
 Kit: 96-890 USA
 Instructions: 96-757



**Chubb “Q”
 Envelope
 (Right Side)**
 Replace with:
 98RH-20
 Kit: 96-939



**Chubb “Q”
 Without
 Brass Trim**
 Replace with:
 98RH-20
 Kit: 96-862



T With Lower Locker
 Replace with: 98RH-20
 Kit: 14-029 CANADA
 (With Lower Locker)
 Kit: 14-030 USA
 (With Lower Locker)
 Kit: 14-037
 (Lower Locker Only)
 Kit: 96-798 CANADA
 (With Out Lower Locker)
 Kit: 96-959 USA
 (With Out Lower Locker)
 Kit: 96-973-TRIM (Trim only)
 Kit: 96-972 (Locker cover only)



**Diebold Polaris
 Over and Under
 with Clearing Safe**
 Replace with:
 98RH-20
 Kit: 96-956
 Instructions:
 USA N/A



Eagle 103
 Replace with:
 98RH-20
 Kit: 14-180



J-head
 Replace with:
 98RH-20
 Kit: 14-181



Fortis 5084
 Replace with:
 98RH-20
 Kit: 14-188



ACCESS
 Replace with:
 98RH-20
 Kit: 96-960
 Instructions: N/A